

Eddie Bauer® - Packable Wind Jacket

Size Chart								
	XS	S	M	L	XL	2XL	3XL	4XL
Chest	32-34	35-37	38-40	41-43	44-46	48-50	52-54	55-57

CHEST WIDTH

Measure under the arm and around the fullest part of the chest with arms down, keeping tape horizontal.